3m x 4.83m Yankee workshed assembly instruction
Joists and Purlins

1) Fix two joist inside workshed in the places like shown on the diagram.
The distance from bottom joists to top wall panel should be 80mm.
Use metal brackets '034' on the bottom of joists (between joist and wall panel).
Use 70mm screws.

2) when you have fixed two joists assembly on the botom of joists support trims '018'. Screw trim using 4 @ 70mm screws into wall panel.
Do the same for opposite side of joists.

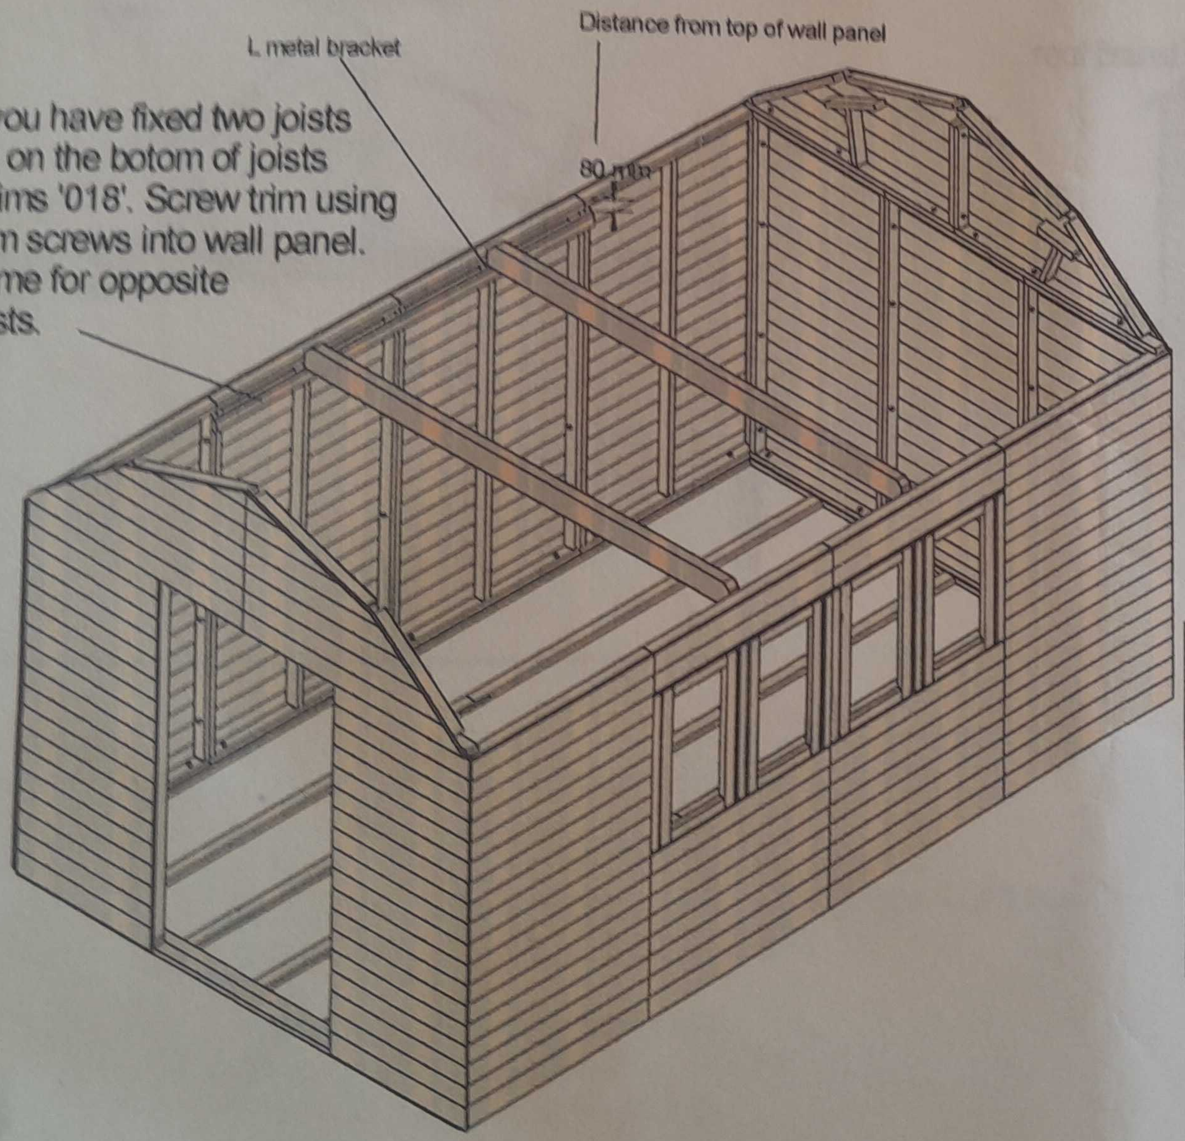

3) Fix two purlin boards '016' together on the middle using metal plates '031' from both sides to create the length 4800mm. Screw metal plates using 35mm screws (10-12 per one metal plate).
Fix three purlins 4800mm.

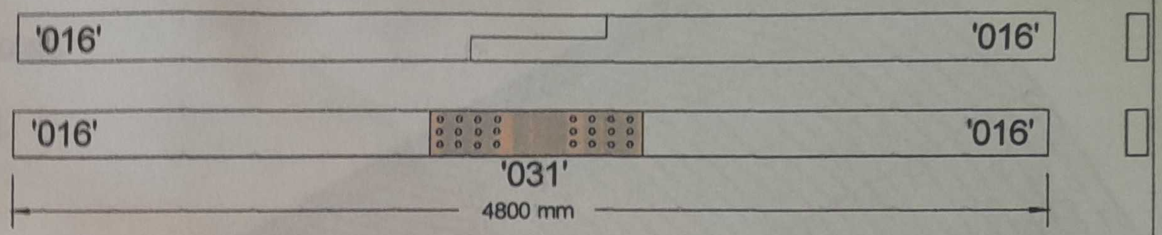

4) Fix three purlins into position and screw from outside roof panels into ends of purlins using 70mm screws.

