3m x 4.83m Yankee workshed assembly instruction

Wall panels

Start to fix wall panels in one of the workshed corner and next fix other panels.

Use 70 mm screws to join all wall panels together

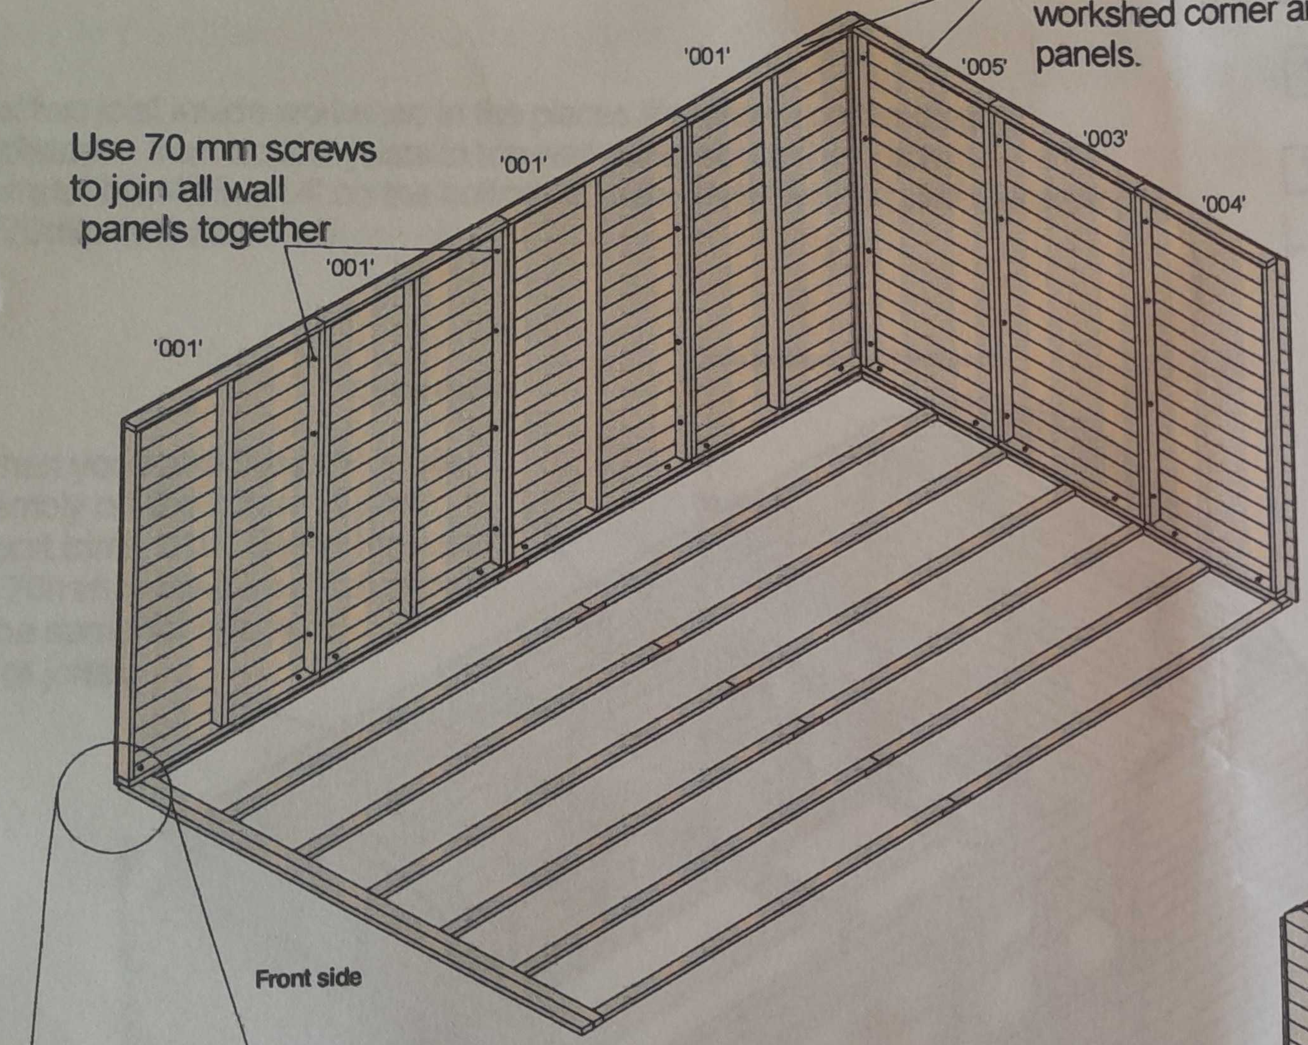

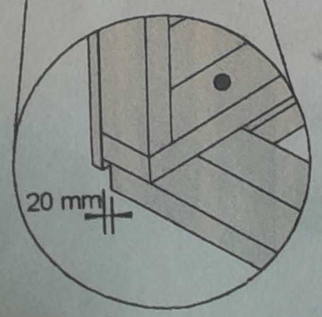

Important!
On the bottom of wall panel between shiplap board and bearer measure and leave the gap 20 mm *and base besides* front wall.

NOTE: Always predrill all screws.

